

OnlineCurtains.com

Made to Measure online

CUSTOM MADE ROMAN BLINDS

BY



NOW AVAILABLE

DECIDE ON A FABRIC
and then...

Choose from 4 Styles

(see below for how to measure your windows)

Style:RB1

- * blockout lined
- * no horizontal seams



Style:RB2

- * blockout lined
- * front battens



Style:RB3

- * blackout lined
- * falls in soft folds when down



Style:RB4

- * for sheer or lightweight fabrics
- * unlined or translucent lining




Add a detail!

- * ADD a piped base or flange cord



- * ADD piping or flange cord above the lathe

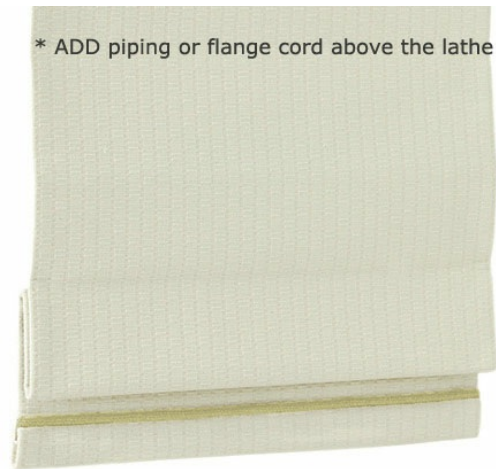

- * ADD a 50mm band to the base



- * ADD 50mm bands to each side



Componentry Choices

- Headrail System ie Chain Drive (as Left)
- Chains: Birch White, Beige, Black, Nickel, Plated Brass (Silver in colour), Stainless Steel



- Cord Operated with Chrome Cleat and Acorn
- ADD a Cord Lock
- Motorisation available

HOW TO MEASURE FOR ROMAN BLINDS

We need a "width" and a "drop" measurement
The maximum size is 3000mm x 3000mm

If fitting Inside the Reveal

Measure:

- **Across** the inside of the reveal in three places. Top, Middle and Bottom. (Use the smallest measurement as your "width" opening size)
- **Down** the inside of the reveal in three places. Left, Middle and Right. (Use the smallest measurement for your "drop" opening size)

If Fitting On the Frame

Measure:

- **Across** the width of the frame then add a minimum of 10mm to each side for your "width" measurement
- **Down** the length of the frame then add as much as you can above the frame to accommodate the "stack" of the blind plus 10mm for your "drop" measurement (just in case your windows aren't square).

Send your selections and measurements
to info@onlinecurtains for a quote...

onlinecurtains.com